


Cascade Microtech, Inc.

SPECIFICATION SHEET

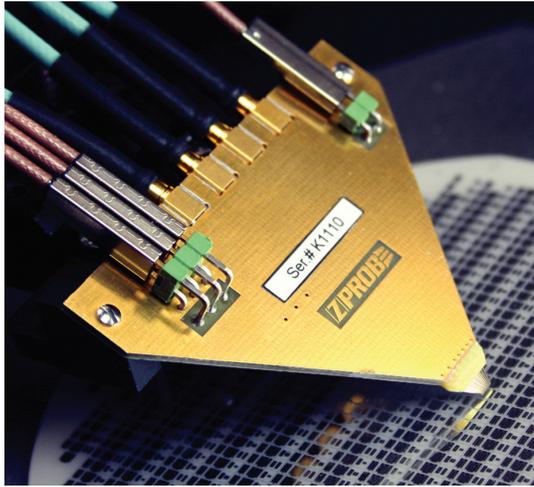

A new dimension in multiport high-frequency measurement

Multi |Z| Probe®

High-Frequency Wafer Probe

With the Multi |Z| Probe, you are no longer limited to just two RF channels with one wafer probe. The Multi |Z| Probe is the only RF probe that can be configured with up to 16 RF channels (35 contacts), providing you with unparalleled multiport RF measurement capabilities up to 15 GHz and superior broadband digital measurements up to 25 GHz.

As the most flexible multiport on-wafer probe, the Multi |Z| Probe gives you the option of placing DC lines on unused RF contacts. This means you can measure DC and RF signals on one very accurate probe, eliminating the need for costly probe cards in many applications. Additionally, elements such as shunts, baluns, DC-blocks or even circuits can be placed directly on the probe. Pitches from 100 μm to 500 μm are standard, but Cascade Microtech is always ready to provide other pitches and individual configurations on request.

The technology used in the Multi |Z| Probe is similar to that of all |Z| Probes. Contact resistance on gold and aluminum is extremely low, and the Multi |Z| Probe's independent, long contact springs can overcome pad height differences of up to 50 μm while providing stable contact and an extremely long lifetime. The RF signal is transmitted from the connector to the air-coplanar waveguide (CPW) lines across an RF-PCB board. Furthermore, the MEMS-machined, symmetrical structures of the Multi |Z| Probe keep coupling and crosstalk at a low level.

The Multi |Z| Probe is part of a complete solution for multiport RF wafer level testing along with Cascade Microtech probe systems, which offer the highest positioning accuracy in X, Y, and Z - a vital feature for HF probing; SussCal® Professional Calibration Software, the first and only fully automated multiport calibration software; and multiport CSR calibration substrates, which are the industry standard in accuracy. This comprehensive solution provides the highest possible accuracy and flexibility in on-wafer HF testing for production and development.

FEATURES AND BENEFITS

Accurate multiport measurements	Only probe with up to 16 RF lines	
	Transmission from coaxial connector to exactly matched air-CPW across RF-PCB	
	Extremely low contact resistance	
Cost effectiveness	Eliminates need for expensive probe cards in many applications	
	Flexibility	Mixed signal RF / DC testing possible on one probe
		Custom elements can be placed directly on the probe
Durability	Independent, long contact springs easily overcome pad height differences up to 50 μm	
	Incredibly long lifetime (> 1,000,000 touchdowns)	
	Safe and repeatable contact with minimal overtravel	

SPECIFICATIONS*

Electrical Characteristics

Characteristic impedance	50 Ω
Maximum frequency	Calibration range: 15 GHz (GSG), 6 GHz (GS, SS) Digital applications up to 25 GHz (GSG), 7.5 GHz (GS)
Contact resistance on Au	$\leq 0.04 \Omega$
Contact resistance on Al	< 30 m Ω

Mechanical Characteristics

Contact springs	Nickel
Contact cycles on Al	> 1,000,000
Contact spring pressure	About 1 N/mm per contact
Contact span	Maximum 4 mm overall width (7 pin standard board) Maximum 6 mm overall width (15 pin standard board)
Standard pitches (μm)	100, 125, 150, 200, 250, 500 μm

Connector


Type	Up to 16 x Mini-Coax Up to 8 x SMP Up to 4 x SMA
------	--

Cables


Adapter cable	8 cm SMP male to SMA female 8 cm SMP male to 3.5 m SMA female
Cable	1.2 m SMP male to SMA female 1.2 m SMP male to 3.5 m SMA female

*Data, design and specification depend on individual process conditions and can vary according to equipment configurations.
Not all specifications may be valid simultaneously.


PHYSICAL DIMENSIONS

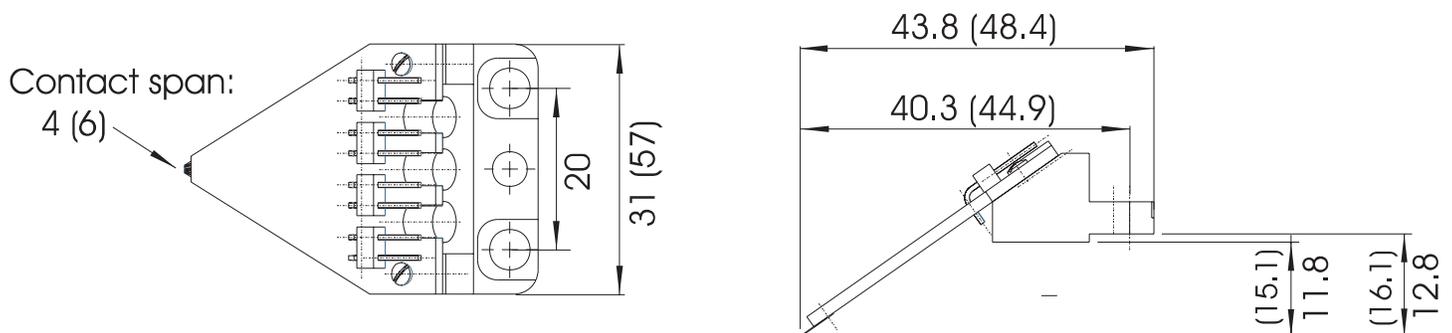


Multi |Z| Probe 3 to 7 pin with medium board size. Variational figures for Multi |Z| Probe 7 to 25 pin with large board size in brackets.
All dimensions in mm.

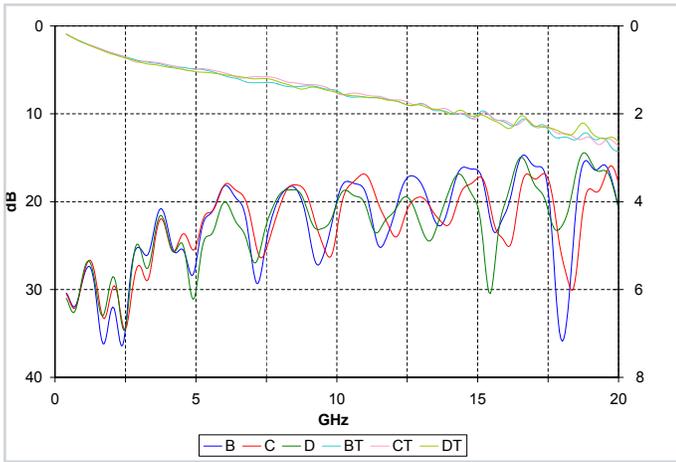

GSGSGSG 150 insertion and return loss.

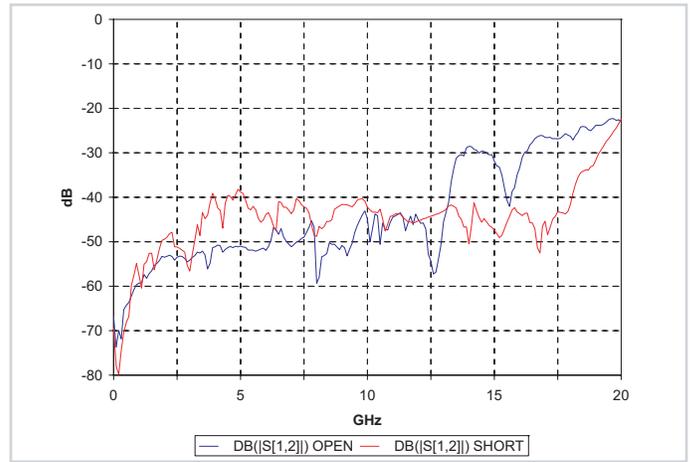

2 x Multi |Z| Probe GSG 150 crosstalk on CSR-8 standards.

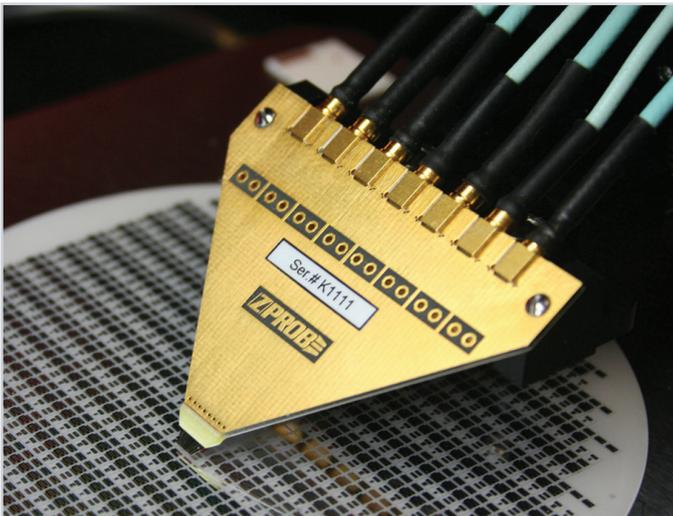

Multi |Z| Probe.

© Copyright 2010 Cascade Microtech, Inc. All rights reserved. Cascade Microtech, SussCal and |Z| Probe are registered trademarks of Cascade Microtech, Inc. All other trademarks are the property of their own respective owners.

Data subject to change without notice

MultiZProbe-SS-0310

Cascade Microtech, Inc.
 toll free: +1-800-550-3279
 phone: +1-503-601-1000
 email: cmj_sales@cmicro.com

Cascade Microtech GmbH
 phone: +49-811-60005-0
 email: cmg_sales@cmicro.com

Cascade Microtech Japan
 phone: +81-3-5615-5150
 email: cmj_sales@cmicro.com

Cascade Microtech Shanghai
 phone: +86-21-3330-3188
 email: cmc_sales@cmicro.com

Cascade Microtech Singapore
 phone: +65-6873-7482
 email: cms_sales@cmicro.com

Cascade Microtech Taiwan
 phone: +886-3-5722810
 email: cmt_sales@cmicro.com